



# Samsung Camera LCD Replacement

Replacing the LCD on a slick Samsung SMX 30F

Written By: Hardy



# INTRODUCTION

Changing the table LCD

## Step 1 — Nappe LCD



- How to replace the LCD on a sheet of Samsung SMX 30F. This ply connects the LCD to the motherboard of the camera. For a change of the single LCD process is much simpler and requires only a few dozen minutes.

## Step 2



- Step 1: Remove the front block.
- Remove all the screws on the front of the camera





### Step 3



- Then gently pull on the block, beware it is connected to the camera by relatively short son.

### Step 4

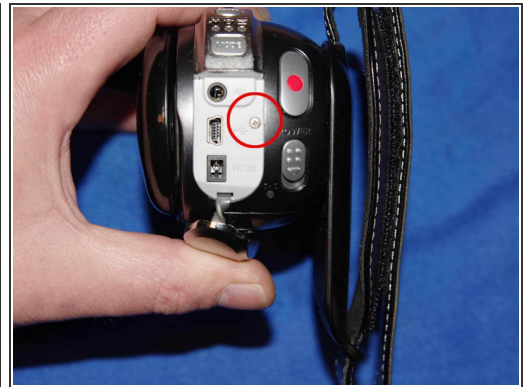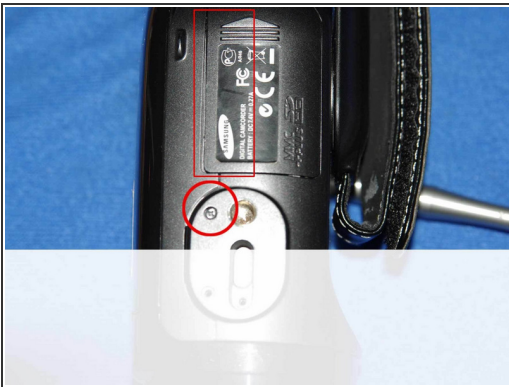


- Remove all the screws by making good around the device. Warning: some are hidden under the handle, behind the doors ....

## Step 5



- Finally remove the two screws connecting the monitor to the camera body.
- Now you can remove the shell of the camera, it should come easily if you feel resistance is that you left a screw somewhere.


## Step 6

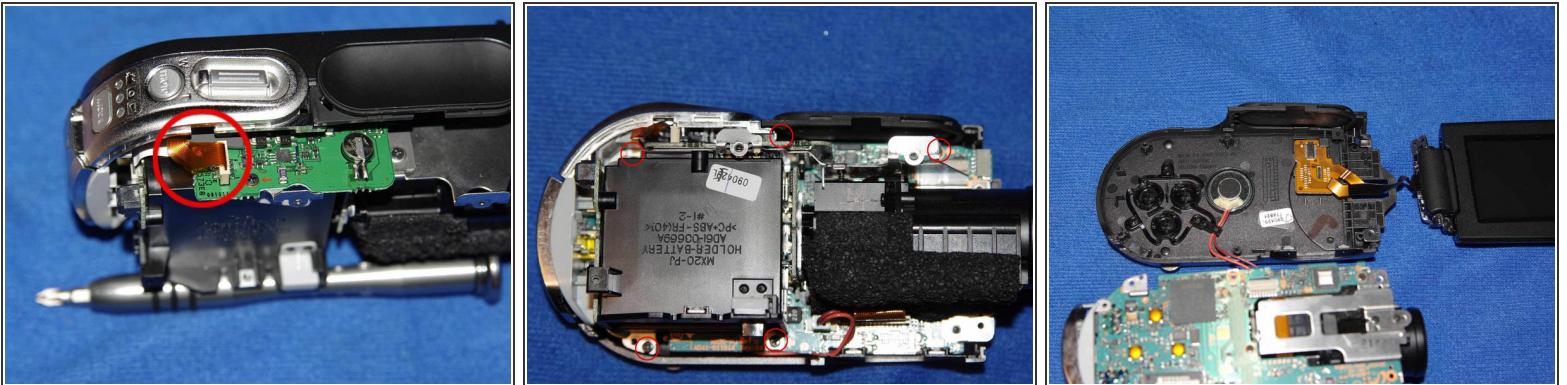

- Careful removing the hull, it often happens that this sheet dislodges the fragile connector.
- You can now remove the screws holding the motherboard to the chassis.
- Then carefully remove the motherboard to access the web from the LCD.




## Step 7

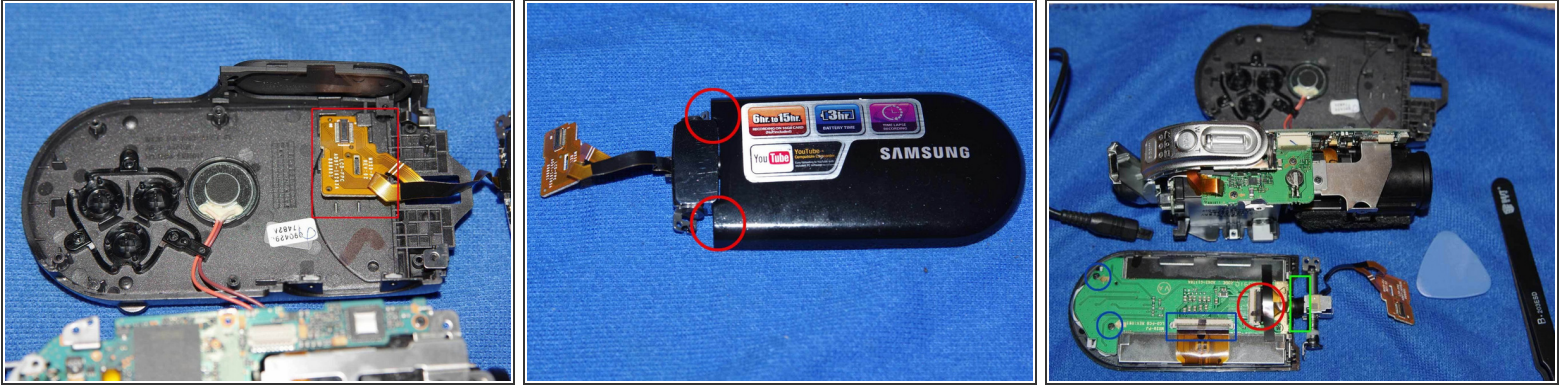

- Remove the sheet from the LCD frame.
- Remove the 4 screws of the screen. And gently open with a pick.
- You can now change the tablecloth. Warning the tablecloth wrapped around the metal shaft, count the number of turns disassembly to facilitate reassembly.

## Step 8

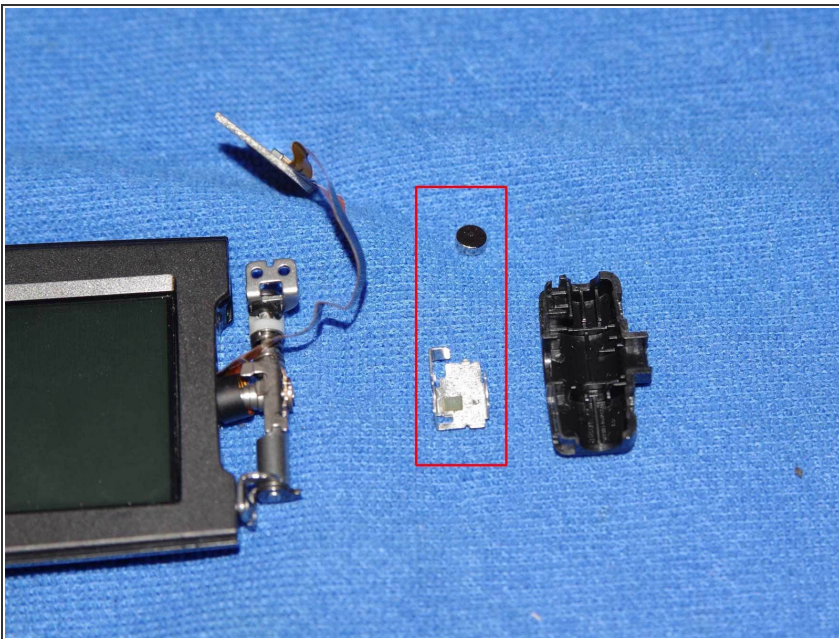

- When reassembling first position the metal clip and small magnet in the black housing before replacing the metal shaft.

Pour réassembler votre appareil, suivez les instructions dans l'ordre inverse.

